



The GV60-2008 Electronic Ignition Remote Control system is used on the Valor heaters models 530I, 739IL, 739IR, 1200, 1300 and MF28I

### Initial Set-up

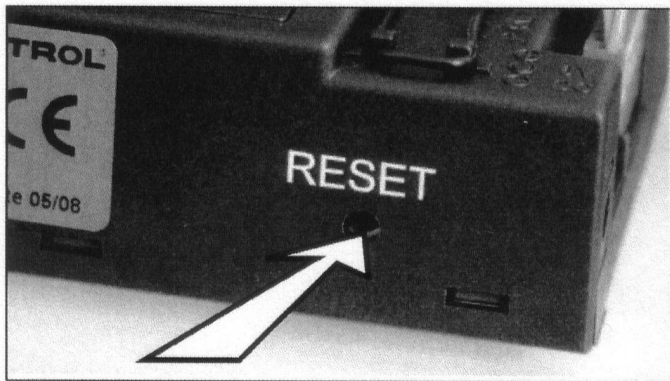


Push Reset Button  
1-short & 1 long beep

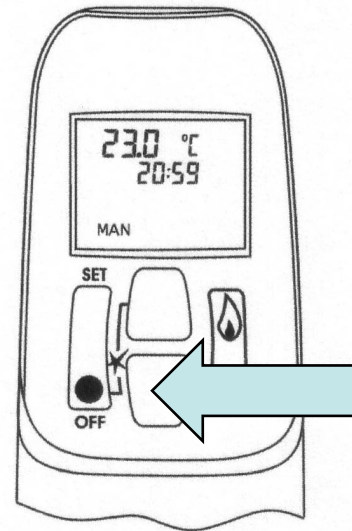


Press Low Flame Button  
2 – sort beeps

### Set - 12 or 24 Hour Clock


Press and hold the Off  
And Low Flame button  
until display changes

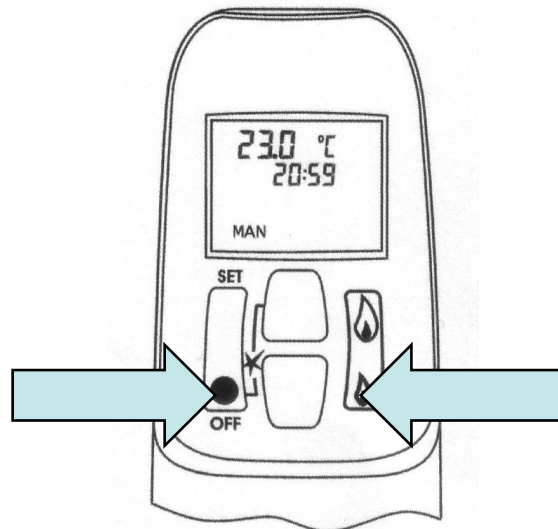


### Set Time

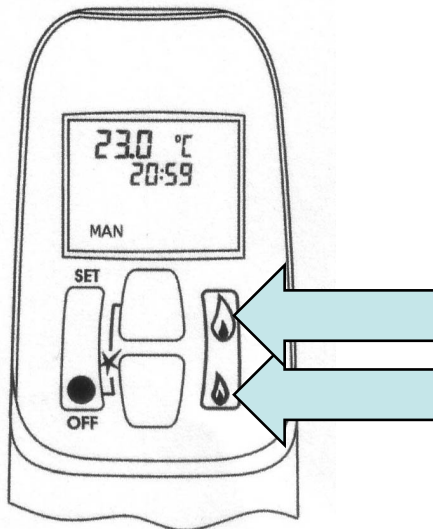

Hold High and Low Flame buttons until display flashes

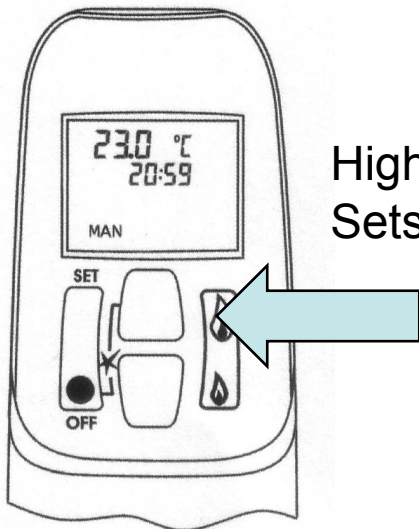


High Flame Sets Hour

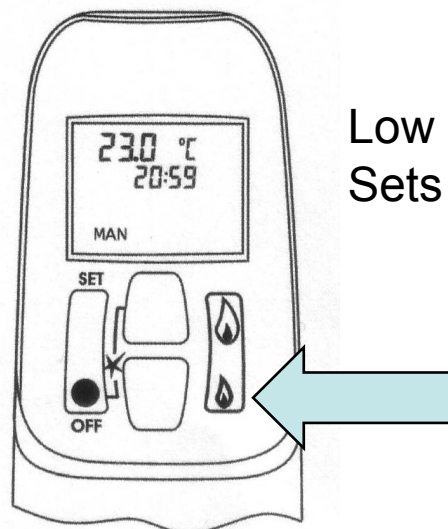

Low Flame Sets Minute

## High and Low Flame

In Manual Mode Use High Flame Button for more flame and Low Flame Button for less flame.

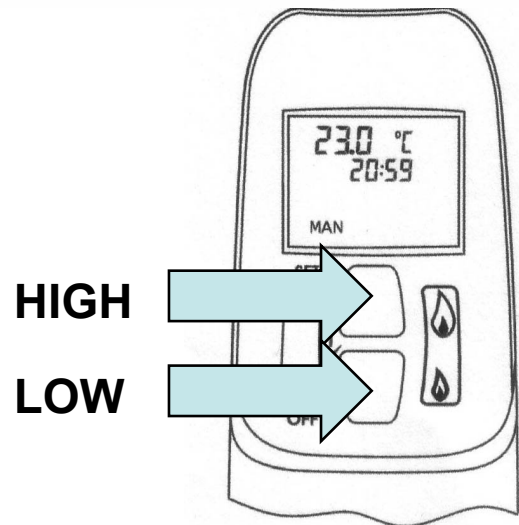

## Low Battery

Handset Low Battery – BATT appears – replace with 9V

Receiver Low Battery – 3 short beeps when motor turns


Very Low Battery – Fire shuts off

Replace with 4 – AA 1.5 Volt

## Automatic Standby Mode

When there is no transmission from the Handset to the Receiver for 6-hours, the fireplace goes to Pilot or Standby.

## Manual Ignition (Lost Remote)

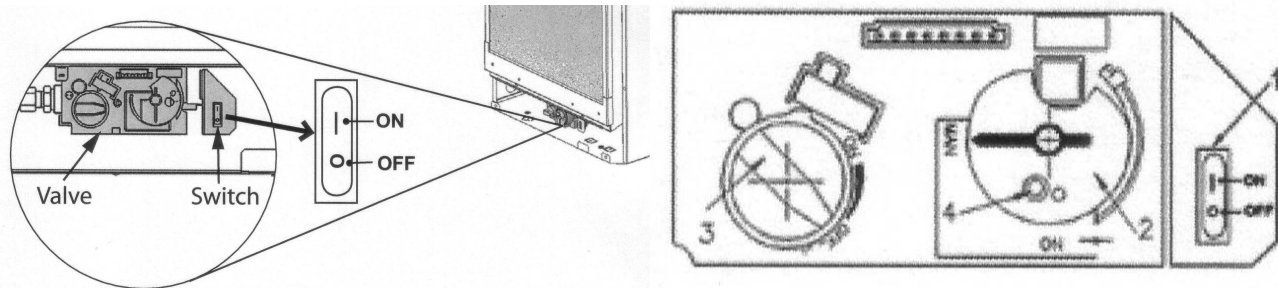

### Steps for Manual Ignition

Remove Window and Locate Pilot

1. Set ON/OFF Switch to ON
2. Turn MAN/ON Knob to MAN
3. Adjust Flame Knob to Lowest Setting
4. Push Down Core with Pen or Similar Object
5. Light Pilot with Match and Hold Core Down for 10 sec.
6. Replace Window and return MAN/ON Knob to ON
7. Turn Flame Up or Down with Flame Knob

### WARNING TO THE APPLIANCE OWNER

For your safety, read the user instructions before attempting to light the appliance.

**BEFORE OPERATING** smell all around the appliance area for gas

Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

### WHAT TO DO IF YOU SMELL GAS

Do not try to light any appliance.

Do not touch any electrical switch; do not use any phone in your building.


Immediately call your gas supplier from a neighbor's phone.

Follow the gas supplier's instructions.

If you cannot reach your gas supplier, call the fire department.


Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this control or other appliances.

## Fireplace On

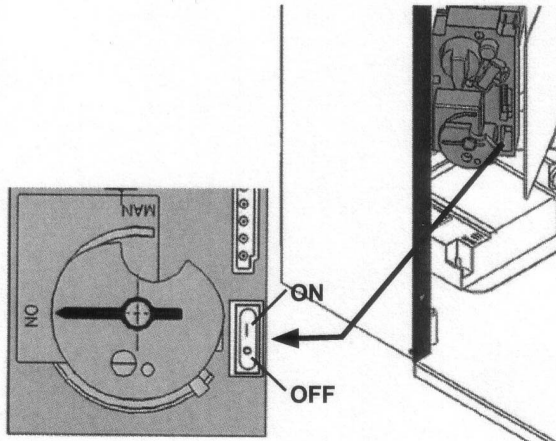

Make sure both manual switches are ON


Press and Hold the High Flame and OFF buttons until 1-short beep

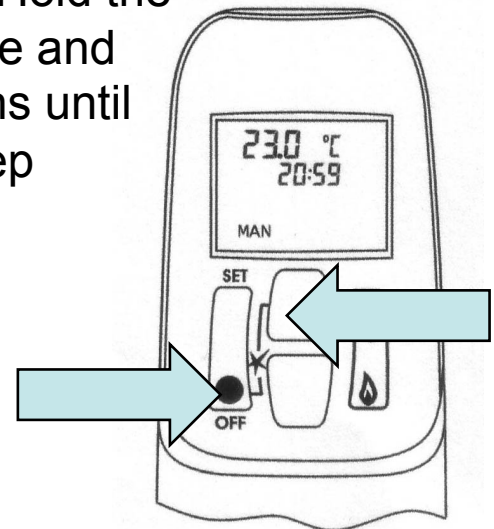

## Fireplace Off


Press Low Flame button to go to Pilot

Press OFF button To turn off pilot

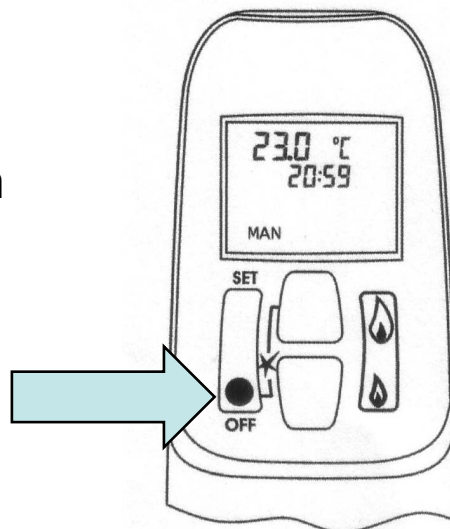

## Operation Modes

Press Set button to  
Step through the  
Modes

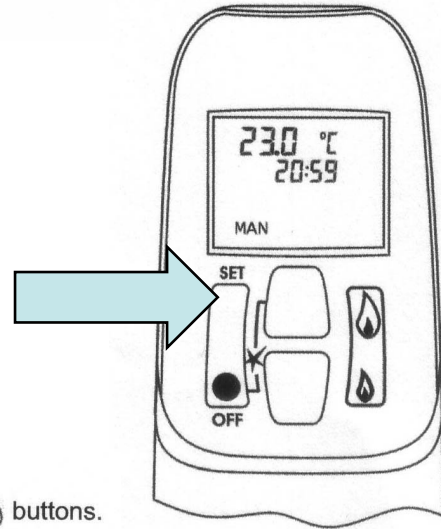

MAN → ☀️ TEMP → 🌙 TEMP → TIMER → and back to MAN.  
NOTE: MAN mode can also be reached by pressing either the 🔥 or 🔥 buttons.


Mode	Sun ☀️	Moon 🌙
<b>TEMP</b>	Daytime temperature setting	Nighttime temperature setting
<b>TIMER</b>	Start time setting	Stop time setting

## Set Temperature

Select Day or Night Temp Mode

Hold Set button until  
display flashes

Use High and Low  
Flame Buttons to set  
Temperature

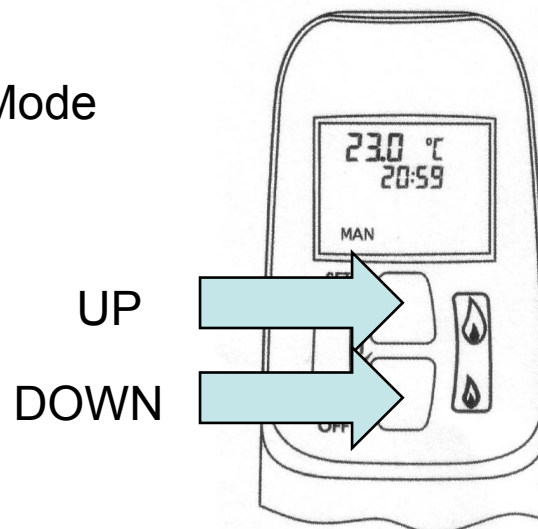

## Set Timer – 2 Events / Day

P1 ☀

P1 ☾

P2 ☀

P2 ☾

**Note: For 1 Event  
Set both P2 for  
Same as P1 off  
Cycle.**

Press Set button to  
Step through the  
Modes to TIMER

Press and Hold the  
Set Button until Timer  
appears in lower right

Press and Hold the  
Set Button until the  
Time flashes. Use  
High (hour) and Low Flame  
(minutes) button to set time.

Briefly hit set button to move to next setting.  
Hold Set button again until the time flashes.  
Repeat until all times are set.

To have one heating cycle, both P2 must be  
set for the P1 cycle

